

Mate Technologies

Windows Quick Installer (Recommended)

Run Windows Quick installer to install on Windows OS

Windows Installation Instructions manual for thermal printer

1. Turn on your printer and connect it to your Windows system
2. Let the built in driver for your printer get installed into your system
3. Install appropriate PL203USB driver for your system
4. Follow steps 4 & 5 for Windows 32 bit PC and follow steps 6 & 7 for 64 bit PC
5. Next install POS driver and set following configuration if you're having Windows 32 bit configuration

Install Module: POS-58 (for MTP2)

POS-80 (for MTP3)

POS-80C (for receipt TP3)

Ports: COM port

BaudRate: 9600 (for MTP2 or MTP3)

115200 (for receipt TP3)

Flow control: XonXoff

6. In Device & Printers, select the newly installed printer device and right click on it. Open Printer Properties->Ports and make sure that the same port enabled on which we installed the printer in above step. On General settings, try to print test page. If the test print is not success, try settings USB Port in Printer Properties->Ports and try to print test page again
7. If you're having Windows 64 bit configuration, go to Devices & Printers, click 'Add Printer' and select 'Add a local printer'. Select existing port on which you have installed printer and select POS64 driver file
8. In Device & Printers, select the newly installed printer device and right click on it. Open Printer Properties-> General, try to print the test page.
9. To check the printer port, right click 'My Computer' and select 'Device manager'. In port settings you can see printer port